ASSEMBLY INSTRUCTION:

1. UNPACK ALL LAMP PARTS CAREFULLY FROM THE BOX
2. SECURING THE COLUMN 1 ONTO THE BASE, ATTACH THE COLUMN 2 TO COLUMN 1, SCREW BRIDGE ARM TO COLUMN 3. PULL ELECTRICAL WIRE FROM BOTTOM BASE(EXCESS), THEN SCREW IT ON THE BASE TIGHTLY.
3. PLACE THE SHADE INTO SOCKET BY SCREWING THE SOCKET RING TIGHTLY
4. SCREW THE BULE BULB INTO THE SOCKET. BULB NOT INCLUDED.
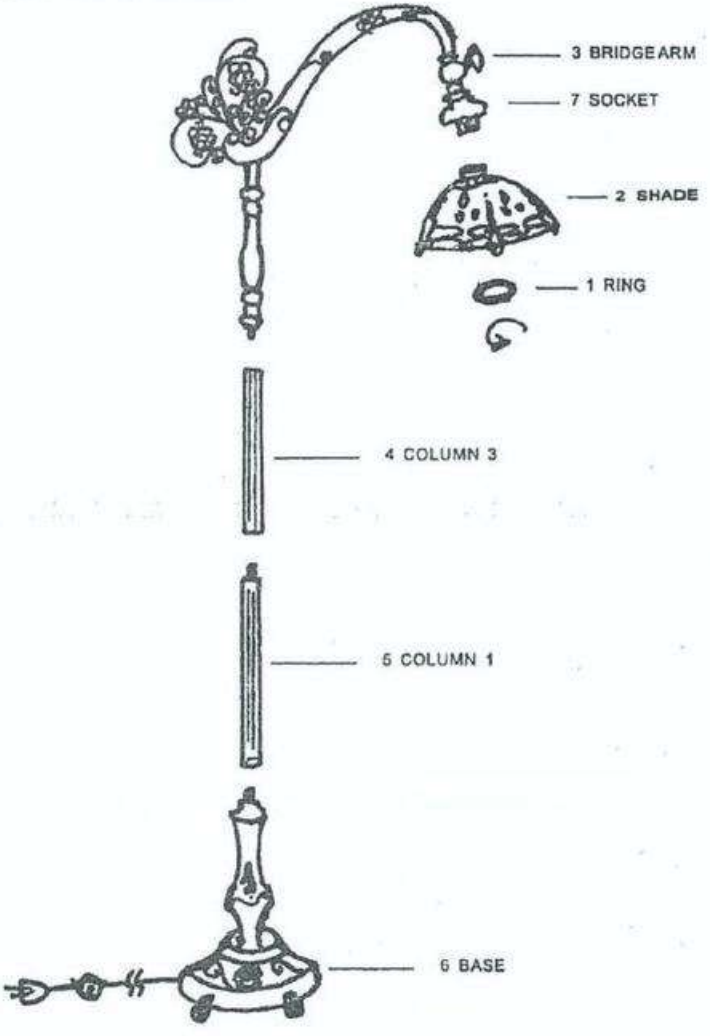
YOUR LAMP ARE READY TO USE NOW.